



- S1 – Start / Stop Button
S2 – Lap / Reset Button
S3 – Mode Button
S4 – Light Button

DISPLAY MODES:

The watch has four display modes: NORMAL TIME, CALENDAR, ALARM and STOPWATCH.

In NORMAL TIME mode, press and hold S1 button to display the CALENDAR.

Press S3 button to select among NORMAL TIME mode, ALARM mode and STOPWATCH mode.

TO SET THE TIME AND CALENDAR:

1. Press S3 button to select NORMAL TIME mode.
2. Press and hold S2 button for approximately 3 seconds, the second digits will blink.
3. Press S1 button to reset the second digits to zero.
4. Press S3 button, the minute digits will blink.
5. Press S1 button to set the minute digits. Holding down the button will speed up the process.
6. Press S3 button, the hour digits will blink.
7. Press S1 button to set the hour digits. Holding down the button will speed up the process.
8. Follow the same pattern to set the date, month, day (of the week), hour format and calendar format.
9. To set the hour format, press S1 button to toggle between 12-hour and 24-hour formats. The P.M. indicator may be displayed to indicate the time period 12:00 P.M. - 11:59 P.M. in 12-hour format.
10. To set the calendar format, press S1 button to toggle between M-D (month-date) and D-M (date-month) formats.
11. When finished making all the settings, press S2 button to confirm.

TO SET THE ALARM TIME:

1. Press S3 button to select ALARM mode.
2. Press and hold S2 button for approximately 3 seconds, the minute digits, will blink.
3. Press S1 button to set the minute digits. Holding down the button will speed up the process.
4. Press S3 button, the hour digits will blink.
5. Press S1 button to set the hour digits. Holding down the button will speed up the process.
6. When finished making all the settings, press S2 button to confirm.

TO TURN ON/NOFF THE ALARM AND HOURLY CHIME:

In ALARM mode,

1. Press S1 button once to activate the alarm. Alarm indicator will appear.
2. Press again to activate the hourly chime. Chime indicator will appear.
3. Press the third time to activate both functions. Both indicators will appear.
4. Press the fourth time to deactivate both functions. Both indicators will disappear.

WHEN AN ALARM OR HOURLY CHIME GOES OFF:

A tune will be emitted by the hour when the hourly chime function is activated.

An alarm tune will be emitted at the designated time when the alarm is activated. To stop the tune, press S1 button or S2 button or S3 button.

TO USE THE STOPWATCH:

1. Press S3 button to select STOPWATCH mode.
2. The stopwatch will then be displayed in its Current state - stopped, running, or reset.
3. To resume a stopped counting, press S1 button to resume from where it left off.
4. To start a new counting, reset the stop watch to zero first. Press S1 button to stop counting, then press S2 button to reset counter to zero.

For the measurement of elapsed time:

In STOPWATCH mode,

1. Press S1 button to start counting.
2. To stop counting, press S1 button once. Press S1 button again to resume from where it left off.
3. To reset to zero, press S1 button to stop counting and then press S2 button.

For the measurement of split time:

In STOPWATCH mode,

1. Press S1 button to start counting.
2. While the stopwatch is running, press S2 button once to register a lap. The split time of the registered lap will be displayed. The stopwatch is still running in the background. To display the current elapsed time, press S2 button again.
3. Repeat the last step until all the laps have been registered.
4. To reset to zero, press S1 button to stop counting and then press S2 button.

TO USE THE BACKLIGHT:

Press S4 button to turn on the backlight for approximately 3 seconds.

LIFETIME LIMITED WARRANTY

The **Geneva Watch Group** warranties that it will repair any failure due to defects in materials and/or workmanship free of charge. This warranty is by **Geneva Watch Group**, not by the dealer from whom it was purchased. This limited warranty does not cover replacement of crystal, battery, band, strap or case. **Geneva Watch Group** reserves the right to replace any or all inside Components in lieu of repair. This warranty does not cover any failure to function properly due to misuse such as water immersion or severe shock. If your watch ever needs service, wrap it carefully in tissue paper or a similar soft material and pack it in a mailing carton. Send it via insured Parcel Post to: **47440 MICHIGAN AVE, SUITE 130 CANTON, MICHIGAN 48188, U.S.A.**, include a brief note explaining what is wrong. Be sure to print your name and address clearly. Enclose \$7.00 to cover the cost of return postage and handling. "Do not send cash or checks. Only money orders, Master Card or Visa are accepted.

8R02-LG420AB-ZYK